Oakley Sound Systems

5U Oakley Modular Series

midiDAC Single Channel midiCV Converter

PCB Issue 4 & 5

User Manual

V5.0

Tony Allgood Oakley Sound Systems Carlisle United Kingdom



 ${\it The suggested front panel layout for the 2U wide MOTM form at module.}$

Introduction

This is the User Manual for the issue 4 and 5 midiDAC midi to CV convertor 5U module from Oakley Sound. This document contains an overview of the operation of the unit, the midiDAC PIC specifications and the calibration procedure.

For the Builder's Guide, which contains a basic introduction to the board, a full parts list for the components needed to populate the boards, and a list of the various interconnections, please visit the main project webpage at:

http://www.oakleysound.com/mididac.htm

For general information regarding where to get parts and suggested part numbers please see our useful Parts Guide at the project webpage or http://www.oakleysound.com/parts.pdf.

For general information on how to build our modules, including circuit board population, mounting front panel components and making up board interconnects please see our generic Construction Guide at the project webpage or http://www.oakleysound.com/construct.pdf.



The issue 5 midiDAC fitted to a 2U wide natural finish Scheaffer panel.

The Oakley midiDAC midi to CV convertor module

The midiDAC is a single channel midi to analogue convertor. This project is a joint development between Oakley Sound and Trevor Page. Trevor wrote the firmware for the processor used in this project.

The midiDAC is designed to drive any 1V/octave synthesiser or modular system. There are eight outputs available:

Gate: +5V gate

Pitch CV: 127 steps of 12 bit accurate pitch voltage conforming to 1V/octave

(trimmable). Pitch bend is added to this signal and the maximum bend interval (up to one octave) can be adjusted from the bend depth control.

Velocity: 0 to 10V proportional to midi note on velocity.

Pitch Bend: -5V to +5V proportional to pitch bend wheel position. 0V corresponds to a

centred wheel.

Modulation: 0 to 10V proportional to modulation wheel position.

Aftertouch: 0 to 10V proportional to midi channel aftertouch.

CC # 100: 0 to 10V proportional to midi controller number 100.

Legato: This signal goes to +5V when two notes are played at the same time. This

can allow slides to be activated at will; TB303 style. An optional external switch may be used to override the automatic activation of slide. Slide may be

turned off by transmitting the standard midi glide/slide command.

Also featured on the circuit board itself is a 3-way header to directly feed the Oakley 'CV-gate' bus on the Dizzy board.

The design also features a midi thru circuit which is greatly improved on the previous issue midiDAC designs. The processor used in this project is a PIC16F628 running at 4 MHz.

Please note: this product does not support the use of V/Hz or linear VCOs. These are found on some Yamaha and Korg analogue products, and just one Roland, the SH-2000.

Other Features

There is a note stack within the firmware to allow the midiDAC to remember notes pressed. Thus if two or more notes are pressed at the same time, the oldest notes will be remembered so that if the more recent notes are removed the pitch will return to the still pressed older notes.

The midiDAC also includes a TB303 style slide circuit. This can be turned either by engaging a switch, or by playing two notes at once. The pitch will glide up or down to the most recently pressed note. A pot can control the speed of the slide.

Note retriggering is an option that can be changed on the fly. A simple switch or link can be used to select whether it is on or off. Ordinarily, when a note is pressed the gate always goes high. However, if a second note is pressed while another is still held down, the pitch CV will change but the gate remains high. The envelope generators on your synth will not retrigger. This is typical of Moog synthesisers. It can be useful. The 'Retriggering' mode allows the gate to drop momentarily when any new note note is pressed if there is a note already down. Thus, when the pitch CV changes, the envelopes will be retriggered, just like a normal note. This allows fast keyboard runs to be easily achieved.

The new suggested panel layout incorporates both the glide and re-trigger switches.

The midiDAC features a built in midi THRU port. This essentially produces a copy of the midi input signal which can be then fed to another midi unit. Both the opto isolator and the THRU buffer are high speed devices so there is minimal skew. Skew, in this case, is the difference in rise and fall times of the digital midi data stream. Each opto-coupler the midi data has to travel through will alter the shape of the data waveform. This is sometimes thought of as a delay but this is not strictly true. What happens is that for each opto-coupler and cable run the midi signal has to pass through the more skewed the signal will be. Excessive skew will cause data corruption, eg. notes will be randomly dropped or held, particularly if there is a lot of information being sent down that midi cable. Opto-couplers also deteriorate with use so have a limited lifetime. It is therefore not recommended to have long midi chains. Normally just two or three devices in a row is sufficient.

The module requires a split supply of $\pm -15V$ at around $\pm 40mA$ and $\pm 30mA$. $\pm -12V$ operation is not supported.

PIC Firmware Data Version 2.2

The PIC could in theory generate 8 output control 'voltages' when used with a single DAC and 8-channel demultiplexer. However, we only use six of them in this version of the midiDAC firmware:

Output	CV generated
1	Pitch CV
2	Modulation Wheel
3	Note on velocity
4	Pitch bender
5	Aftertouch
6	CC 100
7	Reserved
8	Reserved

The PIC also generates two digital type signals direct from its own ports. These are gate and slide. The former goes low when any note on is received on the selected midi channel and will go high when a note off, or key velocity zero, is received. It will briefly blip high in the case of 'legato mode' off if a second (or third, etc.) note is pressed whilst others are still held down.

The Slide output will go low if more than one note is active on the selected midi channel. The slide will go high if there are no overlapping notes.

For both logic outputs, it is expected that the PIC will drive NPN inverting stages. This is to protect the PIC from improper connections to the true slide and gate outputs. It also provides the facility to level shift upwards very easily.

A third logic output is also available from the PIC that can drive a midi active LED and suitable current limiting resistor. This feature is unused in the midiDAC module. This output goes low for 500mS if any valid midi data is present on the midi port.

Midi Channel selection

Midi channel is selected by four lines which must be either floating or be grounded. The simplest way to set midi channel is with a 4-way DIP switch which shorts the data line to ground. 0 is switch closed (ON) and 1 is switch open (OFF). Binary codes are being read pin 4 to pin 1. Pin 4 is MSB, pin 1 is LSB.

Code	Midi Channel
0000	1
0001	2
0010	3
0011	4
0100	5
0101	6
0110	7
0111	8
1000	9
1001	10
1010	11
1011	12
1100	13
1101	14
1110	15
1111	16

For example, to set midi channel 3, set the DIP switch to 0010. That is, 1 on, 2 off, 3 on, 4 on.



This midiDAC is set to receive midi data on channel 3

Gate Trigger Modes

The midiDAC allows the selection of two gate trigger modes via the 'Legato mode' switch. This is marked on the new PCB as 'RE-TRIG'. You can connect a simple SPST switch to this or a simple jumper. The setting of this switch/jumper determines how the gate signal responds to overlapping notes. Closing this switch, or fitting the jumper, enables multiple gate triggering for legato playing. This is the re-trig option. The gate signal is taken briefly low at the start of a new note, even if the fingers haven't left the keyboard from the previous note.

With the switch open, or leaving the position blank, the gate does not retrigger for overlapping notes. This is the classic analogue keyboard method and more suitable for those TB303 slides.

Legato Mode may also be enabled or disabled via the Legato Footswitch MIDI messages. If these messages are to be used, the Slide Mode switch on the midiDAC unit should remain in the off position.

midiDAC Implementation of MIDI Controllers

The following table summarises the MIDI controllers supported by the midiDAC firmware.

Hex	Dec	Midi Controller Definition	Implementation on the midiDAC
41h	65	Portamento (Slide)	On / Off Switches the portamento (slide) function
44h	68	Legato Footswitch	Controls the gate retrigger mode. 0 to 63 = off, 64 to 127 = on.
78h	120	All Sound Off	Silences all notes & clears accent/gate/slide.
			Data byte = 0 for this controller.
79h	121	Reset All Controllers	Centres Pitch Wheel and zeroes various controllers.
			Data byte = 0 for this controller.
7Bh	123	All Notes Off	Silences all notes & clears
			accent/gate/slide.
			Data byte=0 for this controller.
7Ch	124	Omni Mode Off	Unit responds only to selected MIDI channel.
			Data byte=0 for this controller.*
7Dh	125	Omni Mode On	Unit responds to any MIDI channel. Data byte=0 for this controller.*
7Eh	126	Poly Mode Off	All notes cleared*
7Fh	127	Poly Mode On	All notes cleared*

^{*} In accordance with MMA specifications, all notes are cleared when these controller messages are received.

Note Priority

The midiDAC firmware uses last note priority. That is, it will assign the pitch CV to the last note to be held. However, all 'overlapped' notes are still retained in memory and are reactivated in order should the most recent notes to be held be released.

Copyright Notice

Please note: No permission is granted to copy in anyway, or alter, the PIC firmware provided on the midiDAC PIC. The PIC is copy protected and we ask users not to bypass this protection. The firmware is not available separately, although pre-preprogrammed PICs are available from Oakley Sound Systems.

Calibration

There are two trimmers, V/OCT and INIT, on the midiDAC PCB. Both of them are designed to allow you to make the midiDAC respond correctly to the rest of the modular system. If you already have a perfectly tuned and calibrated system, it is best to trim the midiDAC to suit your system rather than the other way around.

V/OCT

This controls the scaling of the pitch CV output. That is, how much the VCO pitch will change with every note increment on the controlling keyboard or sequencer.

If you already have a calibrated set of VCOs with your current system it is best to adjust the midiDAC's V/OCT trimmer to match your existing set up. Therefore, connect the midiDAC to one of your VCOs and adjust V/OCT until you get perfect tuning.

Remember altering V/OCT will affect all notes on the keyboard, so you need to be looking at getting an octave interval between the notes rather than setting absolute pitch of one note. The INIT trimmer can be adjusted later for setting absolute frequency.

If you do not have an existing system and the midiDAC is your first module, a perfectly calibrated midiDAC will then ensure that the rest of the system will be true. Connect the midiDAC to a keyboard, sequencer, or computer midi interface and power up. Allow the module to settle by leaving it on for ten minutes or so.

Now play the highest C on your controller keyboard. Use the keyboard's octave select buttons to ensure your controller is set to produce the highest octave. Your keyboard will have sent one of two notes. Older midi controllers may actually have sent midi note 127 which is G9. If this is the case you should adjust V/OCT until pin 1 of U1 gives -10.58V (or -10.583V if your voltmeter is that accurate). If your controller sent midi note number 120 which is C9 then you should adjust V/OCT until pin 1 of U1 gives exactly -10.00V.

If you are unsure which note your controller is sending then don't worry. If it's sending G9 you'll be able to get -10.58V easily enough. If it's sending C9 then you won't be able to trim to -10.58V but you will be able to trim to -10.00V. In either case you should verify that for every octave you go up the keyboard the voltage on pin 1, U1 changes by -1.00V. That is if C9 is -10V, then C8 will be -9V, C7 will be -8V and so on.

If you are using a DAW or other midi software program then send the midiDAC note 120 and adjust V/OCT until pin 1 of U1 gives -10.000V.

If you have an older issue 4 midiDAC you will need to correctly adjust the Tune control on the front panel before you measure the output U1 pin 1. You need to centralise the Tune control and ensure that the tune pot's wiper voltage is exactly 0.000V with respect to module ground (0V). The easiest way to monitor this voltage is to put your meter's red lead, or scope probe, on the left hand end of R4.

INIT

This adjusts a controlled voltage offset applied to the pitch CV and sets the range over which the midiDAC's Pitch CV output operates. Set the TUNE pot on the front panel to its central position before you start the adjustment of the INIT trimmer. INIT is set so that any connected VCOs produce the correct note when played from a keyboard or sequencer.

If you have an issue 5 midiDAC with R2 installed then INIT is normally adjusted so that the Pitch CV output produces 0.000V when a C2 note (midi note number 36) has been sent to the module.

If you have an issue 4 midiDAC, or issue 5 without R2 installed, then INIT is normally adjusted so that the Pitch CV output produces 5.000V when a C4 note (midi note number 60) has been sent to the module.

Final Comments

I hope you enjoy using the Oakley midiDAC midi to CV convertor module.

If you have any problems with the module, an excellent source of support is the Oakley Sound Forum at Muffwiggler.com. I am on this group, as well as many other users and builders of Oakley modules.

If you have a comment about this user manual, or have a found a mistake in it, then please do let me know.

Last but not least, can I say a big thank you to all of you who helped and inspired me. Thanks especially to all those nice people on the Synth-diy and Analogue Heaven mailing lists and those at Muffwiggler.com.

Tony Allgood at Oakley Sound

Cumbria, UK © August 2019

No part of this document may be copied by whatever means without my permission.